

- 1) Remove the top 3 windshield screws from the outer fairing, remove the windshield and then temporarily place the center screw back into the fairing.
- 2) Remove lower inside fairing screws using T-27 torx bit on the left and right sides of the fairing (inside the forks), then remove the torx screws from the outer left and right sides of the fairings.
- 3) Next carefully unplug the fairing and remove the outer shell.
- 4) Unplug the wires from the speakers and remove the speakers from the fairing.
- 5) Remove the factory speaker spacer mounts from the fairings making sure to save the factory speaker grills.
- 6) Install the 6 1/2" speaker adapter rings, placing the speaker grill between the adapter and the fairing. Install the adapter rings with the supplied hardware, using the shorter screw in the lower adapter mount location on each side. (Caution: be very careful to not overtighten these screws as damage WILL occur to the dash side of the fairing)
- 7) Now install your new speakers onto the adapter rings with the hardware that is included with the speakers. (**Note:** The speaker adapter rings have two sets of speaker mounting holes. Position on each side so that the speaker mounting holes line up with the side fairing support bracket tab)
- 8) Reinstall the speaker wires making sure to hook up the wires correctly using the chart provided below.

White w/orange stripe
 Green w/white stripe
 Gray w/red stripe
 Green w/black stripe

Left Positive
 Left Negative
 Right Positive
 Right Negative

- 9) Now its time to put the fairing back together on the bike and enjoy your new sound.

